

DIN EN 14825:2016-10 (E)

Air conditioners, liquid chilling packages and heat pumps, with electrically driven compressors, for space heating and cooling - Testing and rating at part load conditions and calculation of seasonal performance

Contents

Page

European foreword	5
Introduction	8
1 Scope	9
2 Normative references	9
3 Terms, definitions, symbols, abbreviated terms and units	9
3.1 Terms and definitions	9
3.2 Symbols, abbreviated terms and units	21
4 Part load conditions in cooling mode	23
4.1 General	23
4.2 Air-to-air units	23
4.3 Water-to-air units and brine-to-air units	24
4.4 Air-to-water units	24
4.5 Water-to-water and brine-to-water units	25
5 Part load conditions in heating mode	26
5.1 General	26
5.2 Air-to-air units	27
5.3 Water-to-air and brine-to-air units	28
5.4 Air-to-water units	28
5.4.1 General	28
5.4.2 Low temperature application	29
5.4.3 Intermediate temperature application	30
5.4.4 Medium temperature application	31
5.4.5 High temperature application	32
5.5 Water-to-water and brine-to-water units	32
5.5.1 General	32
5.5.2 Low temperature application	33
5.5.3 Intermediate temperature application	34
5.5.4 Medium temperature application	35
5.5.5 High temperature application	36
6 Calculation methods for SEER and SEERon	36
6.1 General formula for calculation of SEER	36
6.2 Calculation of the reference annual cooling demand QC	37
6.3 Calculation of the reference annual electricity consumption QCE	37
6.4 Calculation of SEERon	37
6.5 Calculation procedure for determination of EERbin values at part load conditions B, C, D	38
6.5.1 General	38
6.5.2 Calculation procedure for fixed capacity units	38
6.5.3 Calculation procedure for staged and variable capacity units	39
7 Calculation methods for seasonal space heating efficiency s, SCOP, SCOPon and SCOPnet	40

7.1	Calculation of the seasonal space heating efficiency s	40
7.2	General formula for calculation of SCOP	40
7.3	Calculation of the reference annual heating demand Q_H	41
7.4	Calculation of the annual electricity consumption Q_{HE}	41
7.5	Calculation of SCOP _{on} and SCOP _{net}	41
7.6	Calculation procedure for determination of COP _{bin} values at part load conditions A to G	43
7.6.1	General	43
7.6.2	Air-to-air, brine-to-air and water-to-air units	43
7.6.3	Air-to-water, water-to-water and brine-to-water units	44
8	Test methods for testing capacities, EER _{bin} and COP _{bin} values during active mode at part load conditions	45
8.1	General	45
8.2	Basic principles	45
8.3	Uncertainties of measurement	46
8.4	Test procedures for units with fixed capacity	47
8.4.1	General	47
8.4.2	Air-to-air and water-to-air units - Determination of the degradation coefficients C_{dc} and C_{dh}	47
8.4.3	Air-to-water units and water-to-water units - Determination of the degradation factors C_{dc} and C_{dh}	49
8.5	Test procedure for staged and variable capacity units	49
8.5.1	Settings for the required capacity ratio	49
8.5.2	Compensation method	49
9	Test methods for electric power input during thermostat-off mode, standby mode and crankcase heater mode and off mode	50
9.1	Measurement of electric power consumption during thermostat-off mode	50
9.2	Measurement of the electric power consumption during standby mode	50
9.3	Measurement of the electric power consumption during crankcase heater mode	51
9.4	Measurement of the electric power consumption during off mode	51
10	Test report	51
11	Technical data sheet	51
Annex A	(normative) Applicable climate bin hours and hours for active mode, thermostat- off, standby, off mode and crankcase heater mode for air conditioners below and equal to 12 kW	53
A.1	Climate bins	53
A.1.1	Bin limit temperature	53
A.1.2	Cooling	53
A.1.3	Heating	53
A.2	Hours for active mode, thermostat-off, standby, off mode	55
A.2.1	Cooling	55
A.2.2	Heating	55
A.3	Hours used for crankcase heater mode	55
A.3.1	Cooling	55
A.3.2	Heating	55
Annex B	(normative) Applicable climate bin hours and hours for active, thermostat-off, standby, off and crankcase heater modes for space heaters, air to water and water/brine to water units, below or equal to 400kW	56
B.1	Climate bins	56
B.1.1	Bin limit temperature	56
B.1.2	Heating	56
B.2	Hours for active, thermostat off, standby and off modes - Heating	57
B.3	Hours used for crankcase heater mode - Heating	57
Annex C	(normative) Template for technical data sheet	58

C.1	For air to air units below and equal to 12 kW	58
C.2	For space heaters, air-to-water and water/brine-to-water units below or equal to 400kW ...	61
Annex D (informative) Adaption of water temperature for fixed capacity units		63
Annex E (informative) Calculation example for SEERon and SEER - Application to a reversible air-to-air unit with variable capacity		66
E.1	Calculation of SEERon	66
E.2	Calculation of SEER	68
E.2.1	Calculation of reference annual cooling demand (QC) according to Formula (2)	68
E.2.2	Calculation of SEER according to Formula (1)	68
Annex F (informative) Calculation example for SCOPon and SCOPnet - Application to a fixed capacity air-to-water heat pump used for floor heating		69
Annex G (informative) Calculation example for SCOPon and SCOPnet - Application to a fixed capacity brine-to-water heat pump used for medium temperature application		73
Annex H (informative) Compensation methods for air-to-water and water/brine-to-water units		78
H.1	General	78
H.2	Compensation system for reduced capacity test in cooling mode	78
H.3	Compensation system for reduced capacity test in heating mode	78
Annex ZA (informative) Relationship between this European Standard and the requirements of Commission Regulation (EU) No 206/2012		80
Annex ZB (informative) Relationship between this European Standard and the requirements of Commission Regulation (EU) No 813/2013 and Commission Delegated Regulation (EU) No 811/2013		82
Bibliography		85